

# High Viscosity Valve (HVV) System

## economic, safe and easy to use

HVV EXTRACTOR VALVES	
Part No.	Description
726-001	6A, Nitril
726-005	6B, Viton
	6S, Nitril

HVV VALVE SPARES	
Part No.	Description
100-035	Valve Spring
100-652	Retaining Ring
102-085	Profile Seal, Viton
102-087	Profile Seal, Nitril
102-341	O-Ring, Nitril
102-350	Tamper Evident Ring, black
102-517	O-Ring, Viton
726-102	Tube Weldment
726-103	Body Weldment, 6A
726-104	Body Weldment, 6B
743-309	Spring Retainer

HVV TOOLS	
Part No.	Description
741-002	Valve Removal Clamp
741-003	Valve Removal Ring
741-004	Valve Installation Tool
741-011	Valve Service Tool

HVV COUPLERS	
Part No.	Description
727-006	6A, Nitril, Vertical, ¾"
727-016	6A, Nitril, Horizontal, ½"
727-011	6B, Viton, Horizontal, ¾"
727-012	6B, Viton, Vertical, ¾"
727-019	6S, Nitril, Horizontal, ½"
727-020	6S, Nitril, Vertical, ¾"
727-021	6S, Nitril, Vertical, ½"

# High Viscosity Valve (HVV) System

## economic, safe and easy to use

HVV COUPLER SPARES	
Part No.	Description
100-615	Non Return Valve spring
100-654	Dry Break Spring
100-655	Spring for Ball
100-656	Upper NRV Spring
100-657	Ball
100-658	Filter
100-663	Body Assembly Pin
102-074	Dry Break Seal, Viton
102-075	Dry Break Seal, Nitril
102-344	INS Check Vavle, Nylon
102-378	Containment Seal, Nitril
102-874	Containment Seal, Viton
727-101	Lower Probe Non Return Valve Assembly
727-302	Plated Handle Ring
727-303	Probe
727-303	Body Upper Non Return Valve
727-307	Body PRV
727-308	Sealing Plate, Nitril
727-310	Upper Non Return Valve Retainer
727-311	Replacement Pins
727-312	Housing 6B, Horizontal, ¾"
727-313	Housing 6B, Vertical, ¾"
727-315	Housing 6A, Vertical, ¾"
727-321	Sealing Plate, Viton
727-323	Housing 6A, Horizontal, ½"
727-325	Housing 6S, Horizontal, ½"
727-325	Housing 6S, Vertical, ¾"