

User Instructions


Returnable Stainless Valve/Drum Valve RSV/DV Coupler



Connection



1. Remove Tamper Evident cap (if installed).

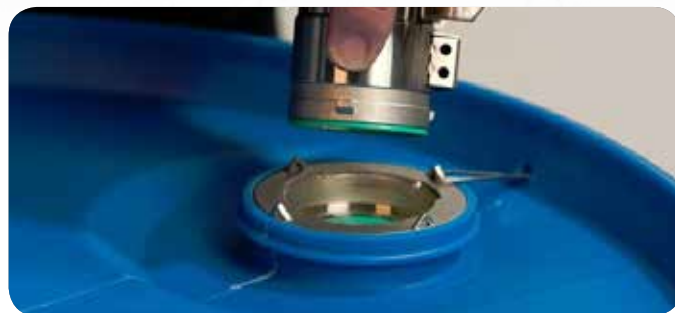

2. Align coupler pins with corresponding slots in the RSV/DV Valve.



3. Rotate coupler clockwise 1/3 turn until it stops.



4. Push down handle to engage.




Coupler properly installed.
Ready to dispense.

Disconnection




1. Push down release tab with thumb allowing handle to come up.

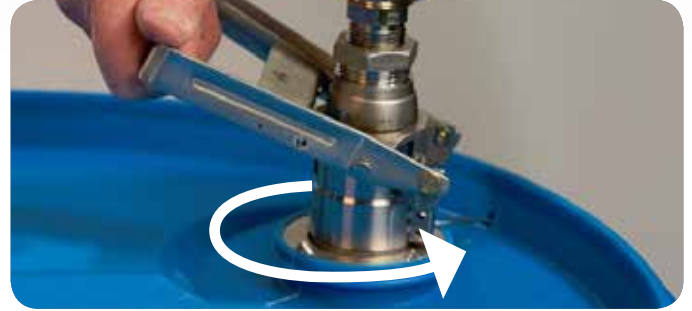

2. Rotate coupler 1/3 turn counter clockwise until it stops. Coupler may now be removed.


Typical Rinsing System Diagram

RSV/DV Coupler with rinsing socket.

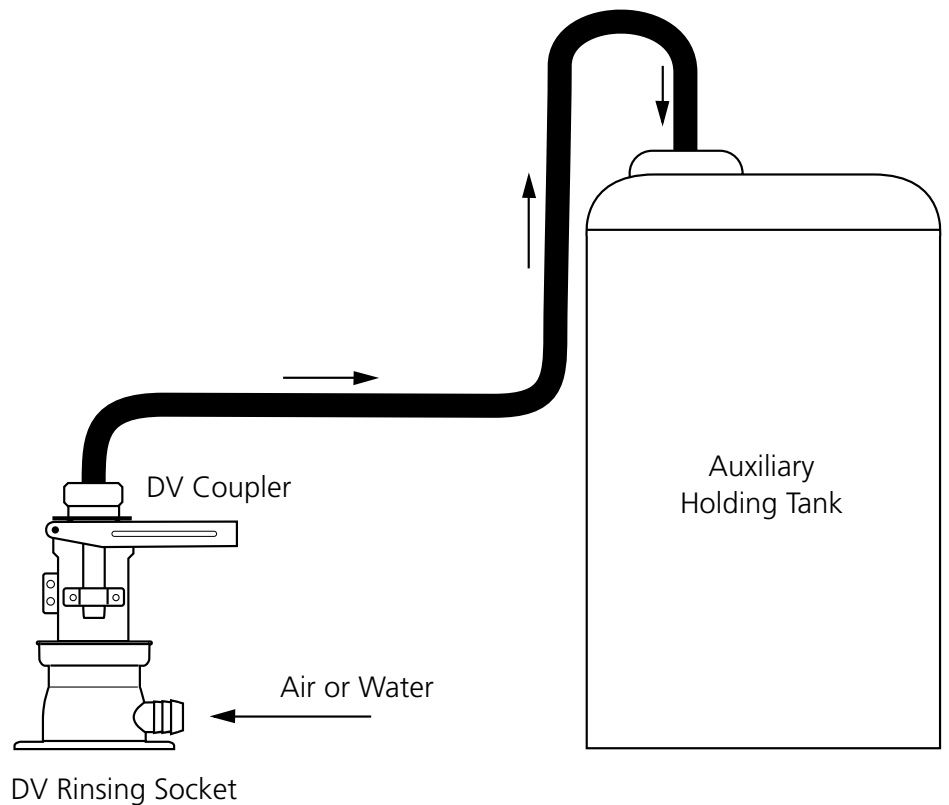


System Diagrams

Typical system using Self Venting Coupler.

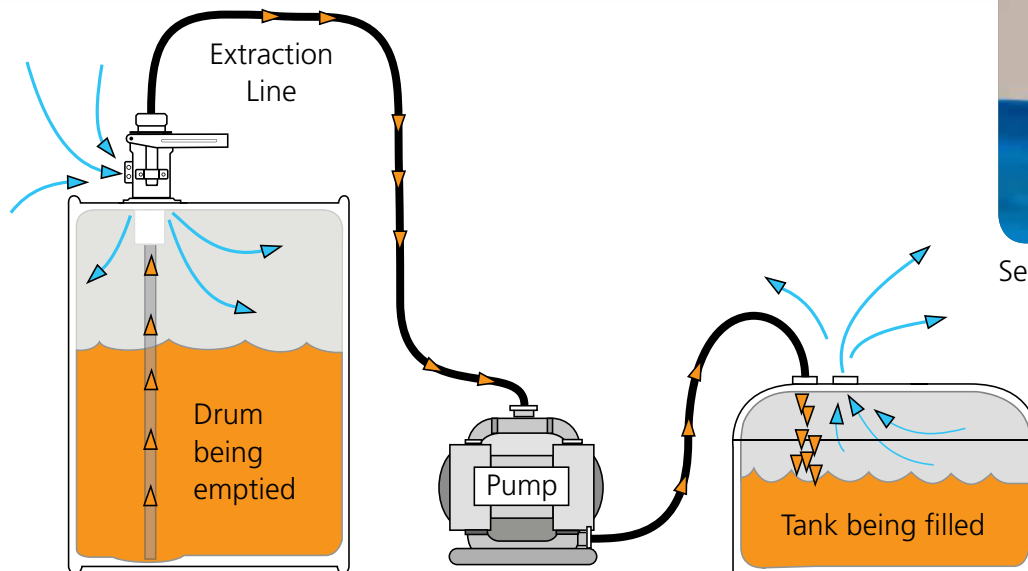

Self Venting Coupler.

Typical vapour recovery system using Vapour Recovery Coupler.

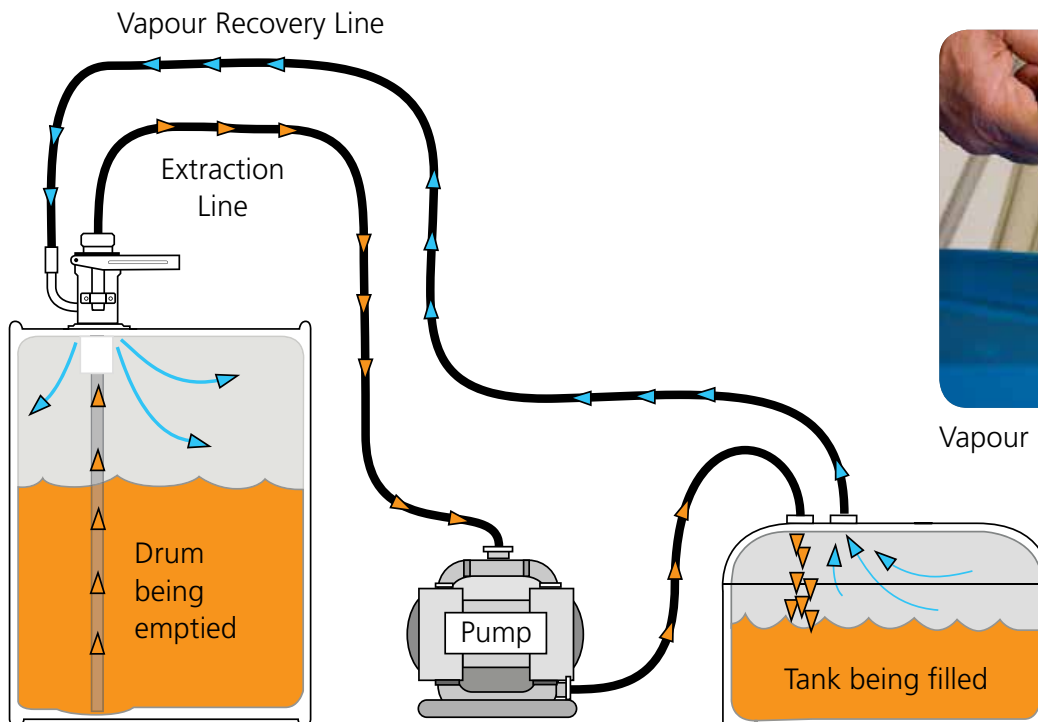

Vapour Recovery Coupler.